



50-687

4-Lug Adapter

Fits most small cars with 4-lug patterns such as Hyundai Accent and Ford Fiesta.



50-688

5-Lug Adapter - Small

Fits many cars with smaller 5 lug patterns such as Chevy Cruze, Toyota Corolla, and VW Jetta.



50-693

5-Lug Adapter - Large

Fits larger 5 Lug cars, smaller SUVs, trucks, most BMW models and Chevy Equinox.



50-946

Light Duty 6 Lug Adapter

6 lug adapter fits newer Colorado/Canyon, some Cadillac, and 6 lug single rear wheel Sprinters.



50-681

1/2 Ton Truck Adapter

Fits many 1/2 ton pick ups including Toyota Tundra and Chevy Silverado 1500. Also fits some European vehicles such as VW Touareg and MB Sprinter.



50-694

1/2 Ton Truck Adapter with F150

Has many 1/2-ton truck and SUV patterns such as Ford F150, GMC Acadia, and Nissan Titan XD.



50-683

HD Truck Adapter

Fits 3/4 and 1-ton applications with 8 or 10-lug patterns such as GM 2500HD and Ford F350.



50-935 R9

Dual Wheel Truck Adapter

Fits most 1 ton dual wheel trucks. Most DW trucks require the use of additional stud extensions and a reach plate. See kits on opposite page.



50-691

4WD Direct Fit Adapter

1/2 ton truck adapter, domestic. Pre-2004 Ford F150.



50-939

Alternate Dual Wheel Adapter


Fits many Asian Dual wheel trucks such as Mitsubishi and Isuzu.



50-246

Small Spacer Ring

Spacer for use with smaller 4 and 5 lug adapters.

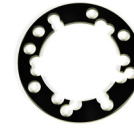

30-791

Larger Spacer Ring

Large spacer for use with single wheel truck adapters.



50-046

Standard Nose Cone Extension

For use when cutting head gear box interferes with rotor.



50-049

Double-thick Nose Cone Extension

Used where high offset is required either because of lathe / brake rotor interference, or where a lift interferes with the trolley.



50-1020

Mini Adapter

MINI adapter includes 4 x 100 and 5 x 120 patterns.



50-1021

BMW & Mini Adapter

5 x 120 and 5 x 112 patterns that fit BMW & MINI and other German vehicles such as VW and Mercedes.



50-3ADPHON

Honda Adapter Kit

Set includes adapter 70mm, 64mm & 56mm.



50-695

Adapter

4,5, and 6 lug adapter. Fits many cars and the lightest trucks.



50-1022

High Hat Adapter

Asian variant high hat adapter. Use if greater offset of the machine is required.



50-689

Adapter

3 lug adapter for SMART car and others.



50-940

Adapter

Alternate Euro adapter includes 5 x 114.3 mm, and 5 x 120mm patterns.



50-955

1-Ton High Hat Adapter

New high hat 1 ton dual wheel truck adapter for rear axle. No stud extensions required. Use with correct reach extension plate for your lathe model. See plates and kits on opposite page.



50-TRANSIT

Ford Transit Adapter Kit

Fits full size Ford Transit single and dual wheel models. Includes: 50-696 adapter, 50-934 adapter, & 50-962 spacers.



50-TRK955

Medium Duty Dual Wheel Kit

For front & rear 3/4 & 1 ton trucks from Ford, GM, & Ram. Includes 50-683, 50-935, 50-955 adapters, 50-1492 reach plate for 220 & 12XX series cutting heads on most 9.2, X9, & A10 lathes.



50-TRKKIT

Dual Wheel Truck Kit

12XX series cutting head compatible. For domestic 1 ton dual wheel pick-up chassis trucks 2002 and newer. Includes 50-683, 50-935, 50-1492, 50-005, 50-007, 50-009



50-1347KIT

Medium Duty Dual Wheel Kit

For front and rear of 3/4 and 1 ton trucks from Ford, GM, and Ram. Includes 50-683, 50-935, 50-955 adapters, and 50-1347 reach plate for 1330 cutting head. Fits X9D.



50-1492K

Ford E&F 350/450/550 Reach Ext. Kit

Allows lathe to reach rear rotors of Ford E&F series 350/450/550. For lathes with Speed-Lock cutting head (50-220) or G2X style cutting heads (1200 series cutting head). Includes: 50-1492 reach plate & 50-005, 50-007, & 50-009 stud extensions.



50-492K

Ford E&F 350/450/550 Reach Ext. Kit

Allows lathe to reach rear rotors of Ford E&F series 350/450/550. For lathes with Speed-Lock (50-220) cutting head only. Includes: 50-492 reach plate & 50-005, 50-007, & 50-009 stud extensions.



50-1492

Reach Extension Plate

Allows lathe to reach rear rotors of medium and heavy duty trucks. For lathes with Speed-Lock cutting head (50-220) or G2X style cutting heads (12XX series cutting head).



50-1347

Reach Extension Plate

Reach Extension plate for 50-1330 Cutting Head.



50-999KIT

Medium-Duty Dual-Wheel Truck Kit

Has 8 on 275mm pattern and 10 on 11.25" pattern. Fits most medium duty trucks and buses. Complete kit for front & rear includes 1) 50-944 adapter, 1) 50-999 adapter, 5) 50-986 M20 nuts, 5) 50-987 M22 nuts, 5) 50-960 25mm spacers, 10) 50-961 8mm spacers.



50-989

HD Adapter

HD adapter with 10x335 pattern. Fits many city & charter buses, and larger trucks with heavy axles.



50-179

Nut and Bolt Kit

Includes 5 nuts each of 1/2"x20, 12mmx1.25, 12mmx1.5, 9/16x18, 14mmx1.5, and 30-687 Studs.



30-687

Studs for Fiat / Dodge / Jeep

Studs for late model Fiat 500, Dodge Dart and 200 models. Requires M12 X 1.25 lug nuts from 50-179 kit.



50-006

GM Hexagonal Stud Extensions

For rear of some 3500 HD GM trucks: 5/8"x18 - 5 per set. For use with 50-935R9 adapter and correct reach plate for your lathe model.



50-1011

Dodge ProMaster Stud Extensions

Stand offs for late model Dodge full size ProMaster. Requires 50-693 adapter and M14 lug nuts from the 50-179 kit.



50-185KIT

Mitsubishi Box Truck Rr. Stud Ext.

Kit includes 3 x 50-185L left-hand thread extensions in blue, 3 x 50-185R right-hand thread extensions in red, and 3 x 35-185 adapter pilot bolts. Use with 50-939 adapter.



SuperTech

SuperTech App for Pro-Cut Techs.

Free app for Android or iOS. Includes: Adapter Search, Pro-Cut Rep zip search, TrainSMART Training, Videos, Diagrams, and Tech Manuals.

<https://www.procutusa.com/supertech.aspx>